


Digital Controller

1) Digital control panel

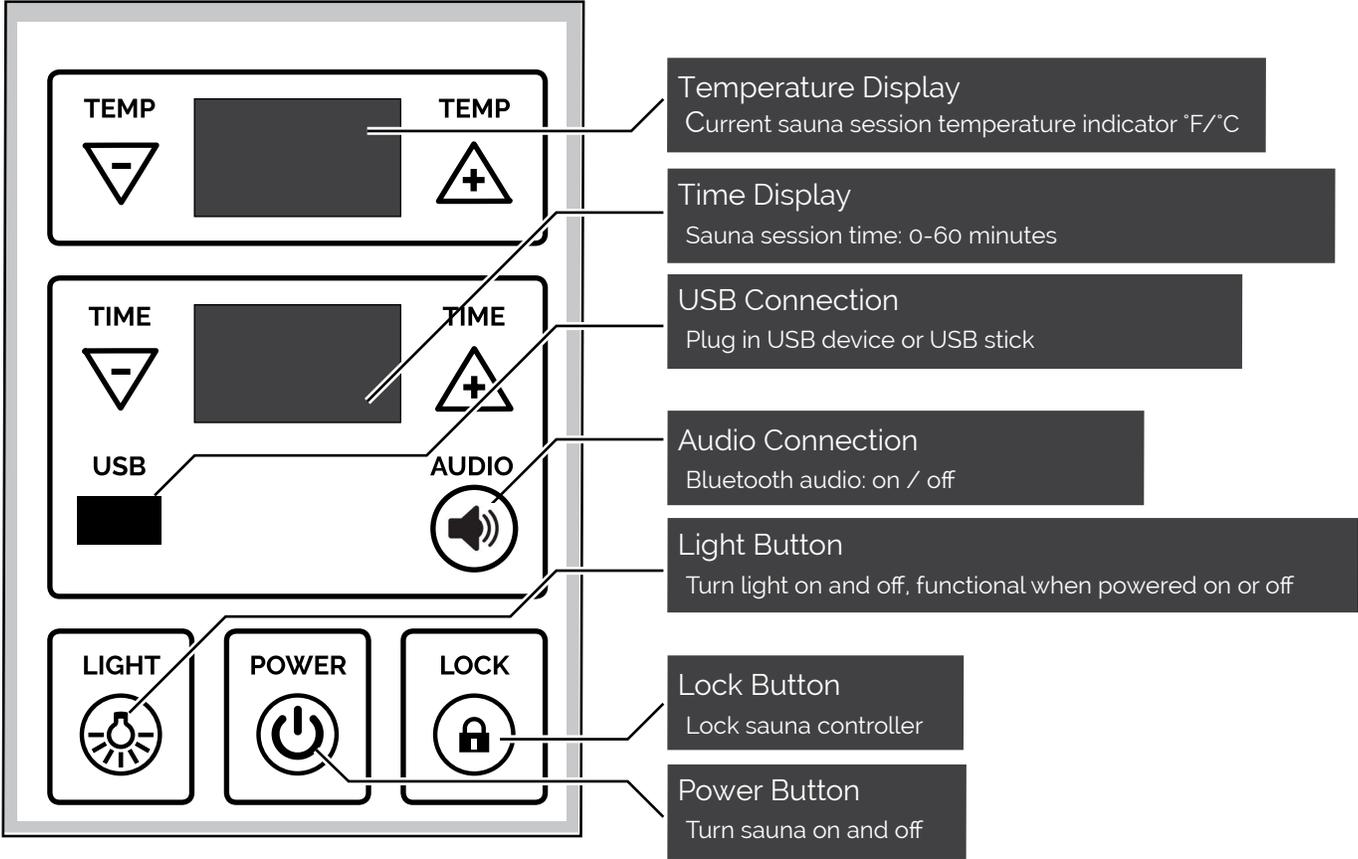

Digital Controller

2) Starting up your sauna

1. Tap and hold the Power button for approximately 5 seconds to start up your sauna.
2. The temperature display will indicate the current cabin temperature. If the ambient temperature within the cabin is below 90°F/30C°, the display will read "LO."
3. The time display will indicate the sauna session time. When the time button is tapped, it will change the time in five-minute increments. The maximum session time is 60 minutes.
4. The Light button will illuminate to indicate that the interior LED panel is turned on. To turn Off, simply tap Light again.




The controller is touch sensitive, so you must hold down the power button for 2-3 seconds.

Digital Controller

3) Setting the sauna session time and temperature


Session Time

1. Tap the Time+ or Time- buttons to adjust the sauna session time.
2. The session time will change in 5-minute increments and can be set between 5 and 60 minutes per session.

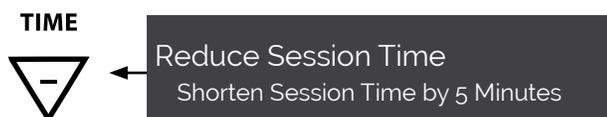

Session Temperature

1. Tap the Temp+ or Temp- button to adjust the sauna session temperature.
2. In Fahrenheit mode (°F), the temperature can be adjusted 5 degrees at a time.
Min. Temp: 90°F, Max Temp: 170°F
3. In Celsius mode (°C), the temperature can be adjusted 1 degree at a time.
Min. Temp: 30°C, Max Temp: 75°C

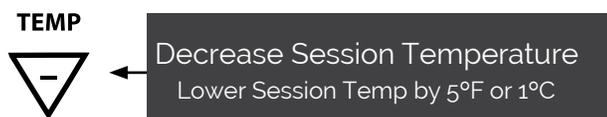

4) Changing between Fahrenheit and Celsius

1. Tap and hold the Power button for approximately 5 seconds to start up your sauna.
2. Touch and hold the "Lock/Res" and "Temp +" buttons at the same time for approximately 8-10 seconds until display changes from "F" or "C". (Fahrenheit is between 90°--170°; Celsius is between 30°--75°)
3. Repeat step 2 to reverse the F--C feature

Digital Controller

5) Using Bluetooth & USB

1. When the sauna is on, tap the "Audio" button so the light is illuminated. The controller should read "BLU" (bluetooth) and "db" (decibels aka volume)
2. Open your Bluetooth settings on your device.

AUDIO



Audio button
Connect to Bluetooth audio

3. Select BT-SAUNA from the list of available connections.
4. Once connected press the TIME + and TIME - to adjust audio volume levels.

Please note that most device operating systems are constantly being updated while the controller's operating system stays the same. This very well may be the cause of bluetooth signal disruptions (sound cutting in and out).

1. When the sauna is on, tap the "Audio" button so the light is illuminated. Tap the "Audio" button until the controller reads "USB" (usb) and "db" (decibels aka volume).
2. Place a high-quality USB audio device into the USB slot.

USB



USB
Connect to USB

3. Once connected, the screen will display USB.
4. Press the TIME + and TIME - to adjust audio volume levels.

8) Locking your sauna's control panel

1. Touch and hold the "Lock" button for approximately 5 seconds.
2. You will hear a beep and "LOCK" will appear on the upper right corner of the time display.
3. During Lock mode, all buttons will not be responsive in either On or Off modes and the Lock button will illuminate.
4. To release the Lock function, touch and hold the "Lock" button for approximately 5 seconds

TEMP




LOCK



To Lock and Unlock Your Sauna
Tap and Hold Both the Temp- and
Lock Buttons for Approx. 5 Seconds

Reservation Controller

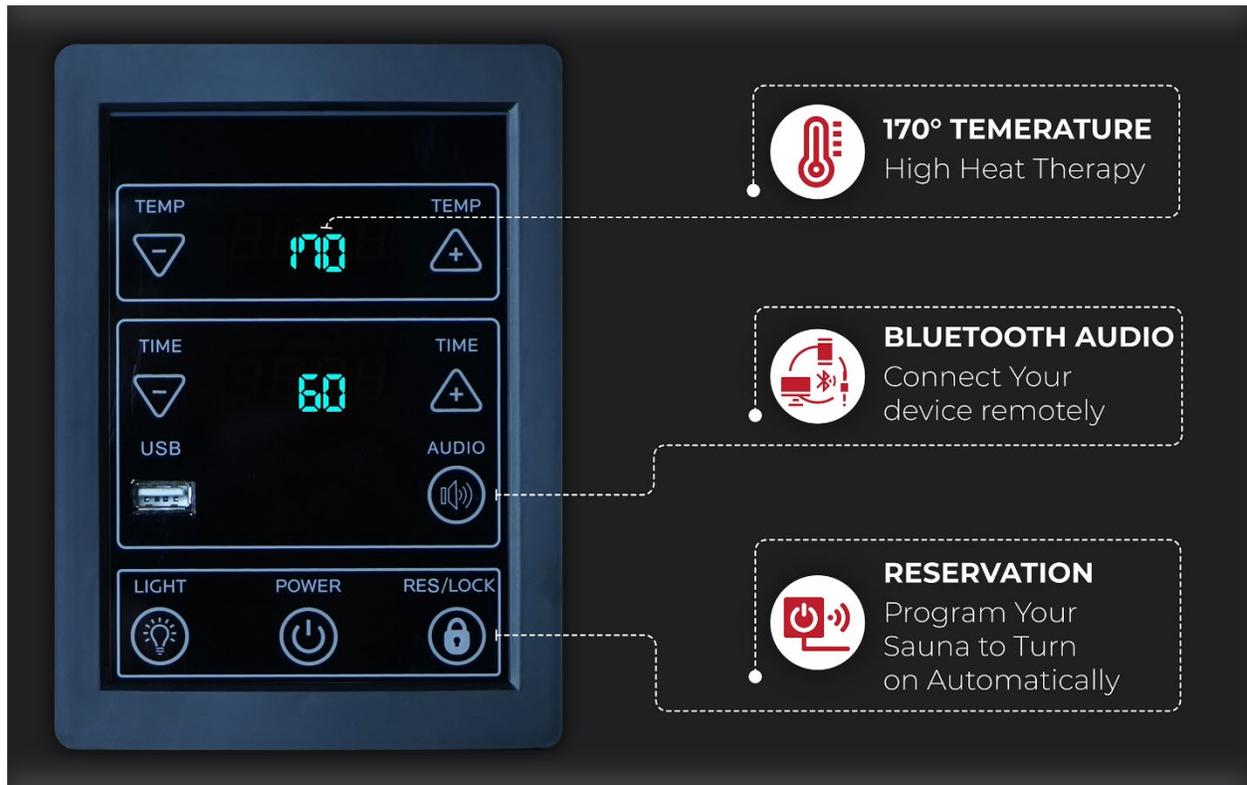

Instructions

 **The reservation feature can only be set when the sauna is “off” but still plugged in.**

 **You must first set the time on the controller.**

1. Short press (simple touch) the RES/LOCK button.
2. Display will display time setting mode.
3. Use time up and time down to set the time.
4. Time will set after 3-5 second after. Do not press any other buttons.

 **Set reservation time.**

1. Hold the RES/LOCK button for 3-5 seconds.
2. Reservation time will appear in the display.
3. Use time up and time down to set the time.
4. Reservation time will set after 3-5 second after. Do not press any other buttons.

 **During operation of the reservation feature, the sauna will only turn on for 30 minutes per safety regulations. Reservation must be set for each use per safety regulations.**